 


## OPERATING THE PROWISE SCREEN

This manual describes how to control the education rooms equipped with a Prowise screen.

 
### STEP 1 – POWER ON THE SYSTEM

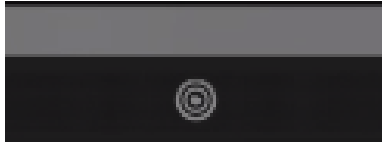

To start the Prowise screen, press the **POWER** button, which is located at the center bottom of the screen.

*Note that some models have a different, bigger button as showed in the picture.*

### STEP 2 – CHOOSE YOUR SOURCE

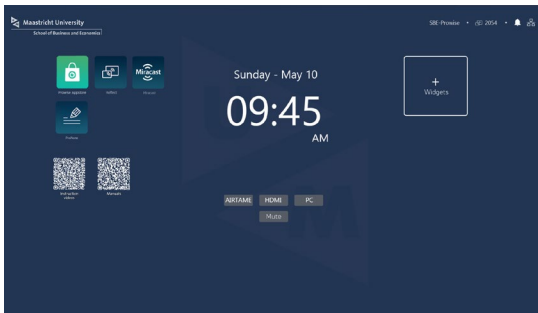


By default, the screens will start up to the main screen. You can select the preferred source at the center of the screen.

At the left hand side, there is a menu with additional options (e.g. volume control). This menu can be moved in or out by pressing the **3-DOTTED** button.

By pressing the **HOME** button, you will go back to the main screen.

### STEP 3 – USE THE BOARD

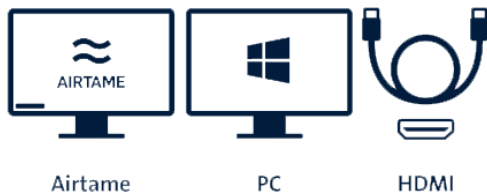 

#### Airtame

Follow the on screen instructions to wirelessly connect your device, or visit [www.umpresent.nl](http://www.umpresent.nl).

#### PC

Use your UM credentials to login.

#### HDMI

Connect your own device with a HDMI cable. Note that you need to bring your own HDMI cable.