

WIRELESS PRESENTING WITH AIRTAME

To make use of wireless presenting, make sure you are connected to the Eduroam or UMnet Wi-Fi network. If you do not have access to the UM Wi-Fi network, please provide a daily access code at the reception desk.

STEP 1



Start the Airtame app on you device.


If you do not have the app installed, please download and install the app from www.umpresent.nl.

STEP 2




At the screen, check for the IP address in the lower left corner (e.g. 10.70.250.229).

In the Airtame app on your device, fill in this IP address in the top bar. The device will now be displayed in the app.

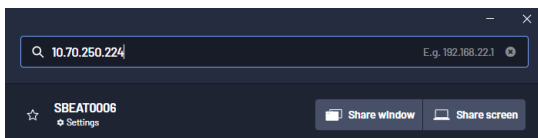

Click 'Share screen' if you want to share your whole screen, or click 'Share window' if you only want to share a particular opened window.

STEP 3

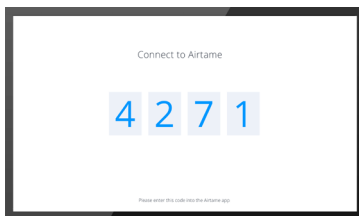

In the app, fill in the code displayed at the screen. When the correct code is entered, the content on your device will be automatically showed at the screen.

By default, the audio will be played on your device. To use the room speakers, press the audio icon in the toolbar. Note that there will be a delay of around 1 second between the 2 devices for a smooth streaming experience.

When minimized, the app will be showed in the top right corner as a toolbar. You can drag and drop this toolbar wherever you want. To stop mirroring, press the red STOP button.

